



Model URC4

MAXVIEW
Teletronics

Universal Remote Control

4 in 1

WITH FASTTEXT



VIDEO



SATELLITE CABLE TV



LEARNING FACILITY

User instruction guide

The Maxview 4 in 1 Universal Remote Control allows you to operate any combination of up to 4 pieces of infra-red controlled equipment eg. TV, Video and Satellite Receiver/Cable Box, Hi-fi or CD Player from one remote control. The 4 in 1 is pre-programmed with a large library of infra-red codes for easy set up of TV, Video and Satellite Receiver/Cable Box by simply entering a code or using the Autosearch facility.

The Learning facility gives you the option of controlling another piece of equipment eg. Hi-fi, CD player from the 4 in 1. The equipment must have an existing remote as the 4 in 1 learns (receives information) from the original.

Video Plus + operation is not available on this model.

The 4 in 1 is designed to provide the same functions as your original remote. For example, if your original does not have Teletext, you will not be able to access the Teletext functions on the 4 in 1.

The 4 in 1 is designed to provide the same functions as your original remote. For example, if your original does not have Teletext, you will not be able to access the Teletext functions on the 4 in 1.

The 4 in 1 is designed to provide the same functions as your original remote. For example, if your original does not have Teletext, you will not be able to access the Teletext functions on the 4 in 1.

Video Plus + is a trademark of Gemstar

Set Used to programme the unit

LED LED will flash green during operation of the 4 in 1.

Power Turn equipment selected ON/STANDBY

Equipment buttons The SAT, VCR and TV buttons select the piece of equipment to be controlled

SHIFT Used to access Teletext and other secondary functions.

MENU Displays an on-screen menu for the adjustment of some functions (if your equipment has this feature)

Mute Press to turn sound ON/OFF

Volume buttons Volume buttons for the adjustment of sound

PROG For the adjustment of programmes or channels

0 to 9, 10+ For direct access channel selection

TV/VCR Switches between TV & VCR


READ Used to identify the code found

VCR buttons For the main VCR functions
NB. READ button must be pressed twice within 2 seconds to activate the record function.

Teletext function for TEXT ON. Press SHIFT followed by 1.

Teletext function for TEXT OFF. Press SHIFT followed by 2.

Should you have any difficulty setting up your Universal Remote Control, please contact our Freephone Customer Helpline on (0800) 895847.

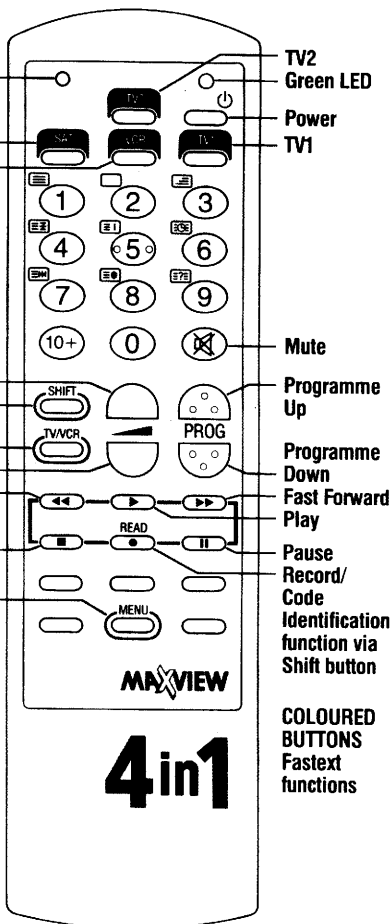

Teletext function for MIX TV/TEXT. Press SHIFT followed by 3.

Teletext function for TEXT HOLD. Press SHIFT followed by 4.

Teletext function for INDEX. Press SHIFT followed by 5.

Teletext function for TIME PAGE. Press SHIFT followed by 6.

Teletext function for TEXT UPDATE. Press SHIFT followed by 7.

Teletext function for TEXT EXPAND. Press SHIFT followed by 8.


Teletext function for TEXT REVEAL. Press SHIFT followed by 9.

RED, GREEN, YELLOW, BLUE, PINK buttons To select the Red, Green, Yellow, Blue or Pink TEXT pages when in TELETEXT screen of TV or interactive MENU control function.

MAXVIEW LIMITED · SETCHEY · KING'S LYNN · NORFOLK · ENGLAND


CUSTOMER HELPLINE (01553) 811000

Battery installation

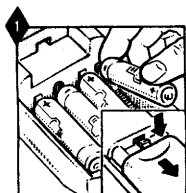

Insert 4 AAA batteries (Alkaline recommended) in compartment at the back of the 4 in 1. Do not use rechargeable batteries.


NB. The 4 in 1 will need reprogramming each time the batteries are changed. Always change all of the batteries at the same time.

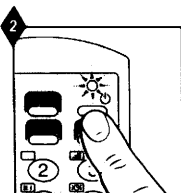


Press the POWER button. The green LED should light up. If the green LED does not light up check you have inserted the batteries correctly and the batteries are new.

Remove the batteries if you do not plan to use the 4 in 1 for a long period of time.

Manual set up

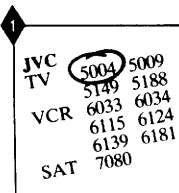


First turn on your TV set. Find your brand and equipment type in the list provided eg. JVC TV. Select the first 4 digit code, but DO NOT enter it yet. If your brand is not listed go to Autosearch.

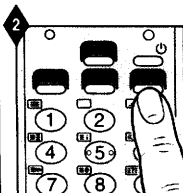


Press TV1 button on the handset.

Manual set up can only be used for TV, VCR, Satellite Receiver/Cable Box. Other equipment eg. Hi-fi, CD player must be set up using the learning facility.

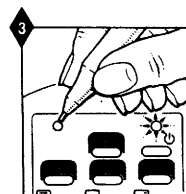


Press the small SET button with the tip of a pen for 2 seconds until the green LED light flashes on/off and then comes on again.

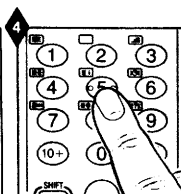


Enter the first 4 digit code. The green LED light will turn off.


If LED flashes 3 times a code not on the list has been entered, try entering the code again. If you do not enter the 4 digit code within 20 seconds of pressing the SET button the LED light will switch off. Start again from step 2.

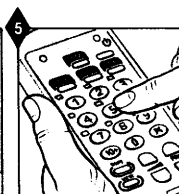

Point the 4 in 1 at your TV and check that all the functions available on original remote are now being controlled from the 4 in 1. If all of the functions operate correctly, write this TV code in the space provided on the back of the 4 in 1 and in the instruction manual. You will need this code again to programme the 4 in 1 when you change the batteries.

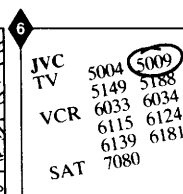

If all of the functions available on original remote do not operate correctly, an incorrect code has been entered. Select the next code from the list and repeat steps 2-5 until correct code is found.

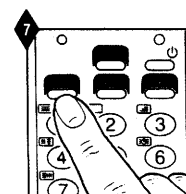

Repeat manual set up steps 1-6 for each piece of other equipment to be set up pressing the appropriate button on handset.
Video - press VCR button
Satellite/Cable - press SAT button.

Manual set up hints

If none of the codes for your particular equipment operate satisfactorily, try Autosearch to set up the 4 in 1.

If your equipment brand is not listed try looking at the back of the equipment to see if it was made by another manufacturer and enter these corresponding codes or use Autosearch to set up the 4 in 1. Alternatively call the Freephone Helpline and state your equipment brand, model number and if possible the reference of the original remote.


If your original remote has buttons that you cannot find on the 4 in 1, it doesn't mean that the 4 in 1 does not have these functions - see **Secondary Functions**.

If you have any further questions call the Freephone Customer Helpline on (0800) 895847.

EQUIPMENT	CODE


Please write the codes for your equipment in the spaces provided. You will need these codes again to reprogramme your 4 in 1 when you change the batteries.

Autosearch

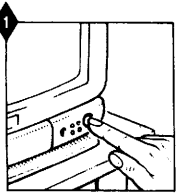


To set up TV/Video/Satellite Receiver/Cable Box first switch on equipment.


Autosearch can only be used for TV, VCR, Satellite Receiver/Cable Box. Other equipment eg. Hi-fi, CD player must be set up using the learning facility.

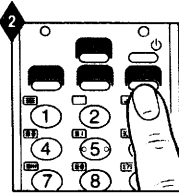


Press either TV1/VCR/SAT button on the handset.

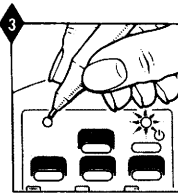


Press the small SET button with the tip of a pen for 2 seconds until the green LED light flashes on/off and then comes on again.

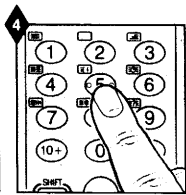

Enter the code 5000 (for a TV), 6000 (for a VCR) or 7000 (for a Satellite Receiver/Cable Box) in order to reset the unit. The green LED light will switch off.

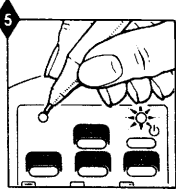


Press the small SET button again with the tip of a pen for 2 seconds until the green LED light flashes on/off and then comes on again.

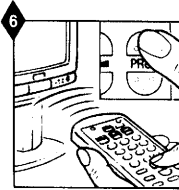


Point 4 in 1 at TV/Video/Satellite Receiver/Cable Box and press PROG UP button for 2 seconds to enter the Autosearch mode.

The green LED light will flash every time the 4 in 1 sends codes one by one to the TV/Video/Satellite Receiver/Cable Box.

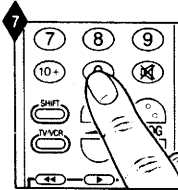


When TV/Video/Satellite Receiver/Cable Box switches off press any button to stop the Autosearch mode.


Please be patient as the remote has hundreds of codes to call up from the library. It takes around 5 minutes to complete the scanning of the whole TV code list and around 3 minutes for the VCR (or SAT) lists.

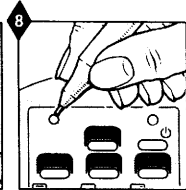


Press the small SET button with the tip of a pen to exit the Autosearch mode. The green LED light will switch off.

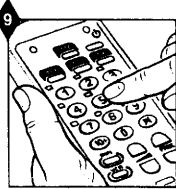


Point the 4 in 1 at your TV/Video/Satellite Receiver/Cable Box and check that all the functions available on your original remote are now being controlled from the 4 in 1.

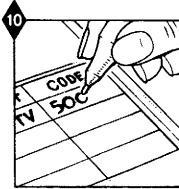

If all the functions available on original remote control operate correctly, identify the selected code with the CODE READ OUT method (see next page) and note it immediately in the space provided on the back of the 4 in 1 and in the instruction manual.

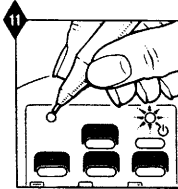

If all of the functions available on original remote do not operate correctly, an incorrect code has been selected. Repeat steps 5-10 until correct code is found.

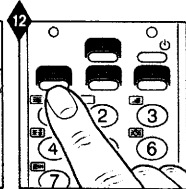

Repeat steps 1-11 for your other equipment.

Autosearch set up hints

Autosearch will only work for the device button which has been selected eg. TV for TV code searching only.

If the green LED light flashes 3 times consecutively, you have reached the end of the code list. The Autosearch will then start again. To stop, press any button on the handset and press the small SET button to exit the Autosearch mode.

Ensure that you use the CODE READ OUT method and write down your code as you will need this code to programme the remote if you change the batteries.


If your TV etc. has any diverse reaction to the Autosearch eg. channel changing this is normal. Ignore these reactions until the equipment finally switches off.

You must exit the Autosearch mode as soon as your equipment switches off by pressing any button. If you do not react quick enough the 4 in 1 will continue sending codes to your equipment. If this happens, switch on your equipment and press slowly and repeatedly the VOLUME DOWN button to step backwards through the codes until your equipment switches off again. Press the SET button to exit the Autosearch mode and then try all of the functions.


If you do not press the SET button for 20 seconds after pressing any button to stop the Autosearch mode the LED will switch off. If this happens start the Autosearch again from step 1.

If you have any further questions call the Freephone Customer Helpline on (0800) 895847.


Code read out

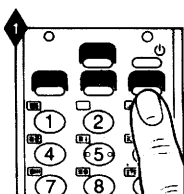


Press either TV1/VCR/SAT button on the handset

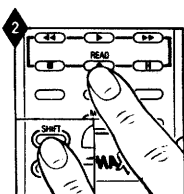

Press and release the SHIFT button, then press and release the READ button to enter the CODE READ OUT mode.

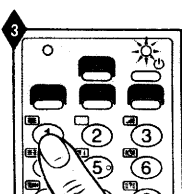


Press and hold the number 1 button. The green LED light will flash several times to identify the first digit of your code. Eg. the green LED light will flash 5 times for the first digit of a TV as the first digit is always 5.

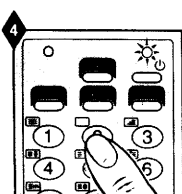


Repeat step 3 using in turn number 2, 3 and 4 buttons to identify the second, third and fourth digits.

NB. If the green LED light does not flash the digit identified is 0.


Teletext

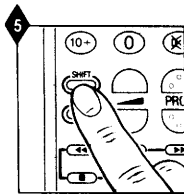


Press the SHIFT button to exit the CODE READ OUT mode.

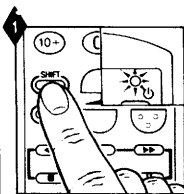

To access Teletext functions press SHIFT button. The green LED light will switch on.

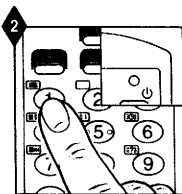

Then press the number button corresponding to the function you need. The green LED light will switch off.

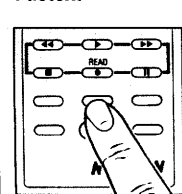


Fastext functions are directly accessible by pressing the coloured keys.


Learning facility

This Learning facility can be used to set up any piece of equipment eg. Hi-fi, CD player that does not have a pre-programmed code, as long as you have the original fully operational remote.


Functions that have been learned will remain in the memory when the batteries are changed.

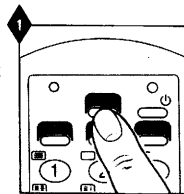


Press the equipment button eg. TV2 where you wish to store the programming for the equipment to be set up.

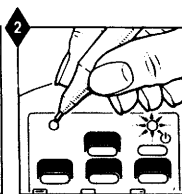


Press the small SET button with the tip of a pen for 2 seconds until the green LED light flashes on/off and then comes on again.

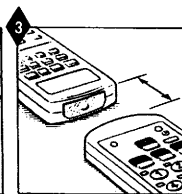


Place the 4 in 1 and original remote towards each other lens-to-lens on a flat, non-reflective surface about 3 to 5 cm apart.

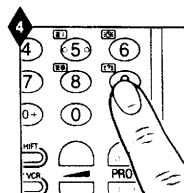

Enter the code 9999 to enter the LEARN mode.

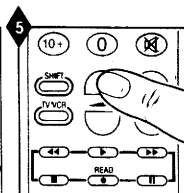


Press the button on the 4 in 1 that you want to program eg. VOLUME UP. The green LED light will flash once.

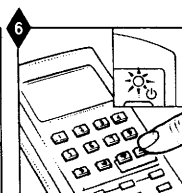

Press the button on original remote that you want the 4 in 1 to learn eg. VOLUME UP for several seconds until the green LED light turns off and then switches on again. Release the button. The LED light will flash twice to show that the function has been accepted. If the LED flashes more than twice, the function has not been accepted.

Repeat steps 5 and 6 until all functions have been learnt.

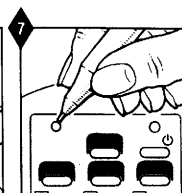

Press the small SET button to exit the learning facility.

Learning set up hints

The 4 in 1 can learn any function except Video Plus+ available on the original remote even if the 4 in 1 doesn't have these buttons. Store these functions on any unused buttons and make a note where you have stored them.

Button combinations SHIFT/1 to 9, SHIFT/VOLUME UP, SHIFT/VOLUME DOWN, SHIFT/PROGRAMME UP and SHIFT/PROGRAMME DOWN can also learn functions.


SHIFT, SET, Equipment buttons cannot learn.

Once a button has learnt a new function, the original function for that button will be lost.


If you do not press any button for 20 seconds, the 4 in 1 will automatically go out of the Learning mode. Start again from step 1.

If green LED light flashes for 4 times, the learn memory is full. Replace the learnt function of one button or erase all previously learned functions (see next page) and re-programme with the most frequently used functions.


To erase functions

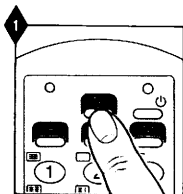


To erase all functions: press the equipment button eg. TV2 from where you wish to erase functions.

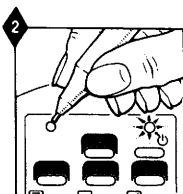

Press the small SET button with the tip of a pen for 2 seconds until the green LED light flashes on/off and then comes on again.

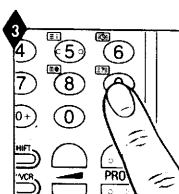


Enter the code 9999 to enter the LEARN mode.

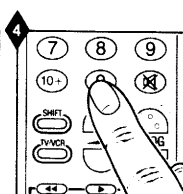

Press the SHIFT button and enter the code 0000. All previously programmed functions have now been erased.


Punch through

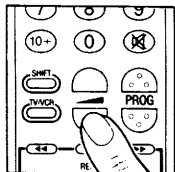

This function allows you to access TV VOLUME UP/DOWN and MUTE functions whilst in VCR, Sat/Cable Box mode.

Secondary functions


Most of the buttons that are available on your original remote control which do not appear on the 4 in 1 can be accessed via the SHIFT button. Call the Freephone Helpline for further information.

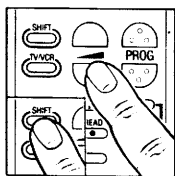

The most common functions are:

COLOUR UP Depress SHIFT button followed by VOLUME UP button until desired setting is reached.


COLOUR DOWN Depress SHIFT button followed by VOLUME DOWN button until desired setting is reached.

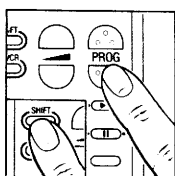


BRIGHTNESS UP Depress SHIFT button followed by PROG UP button until desired setting is reached.

BRIGHTNESS DOWN Depress SHIFT button followed by PROG DOWN button until desired setting is reached.


Sleep function

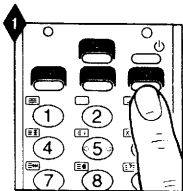


The 4 in 1 can turn off your equipment at a pre-programmed time. Press either TV/VCR/SAT button on the handset for the equipment you wish to pre-programme.

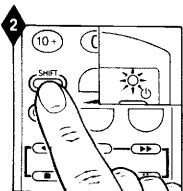

Press and release the SHIFT button. The green LED light will come on.

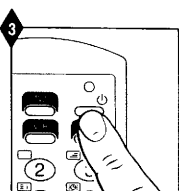


Press and release the POWER button to enter the SLEEP TIMER mode.

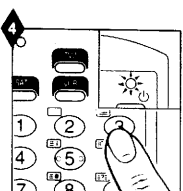

Enter the desired sleep time, eg. If you want your equipment to switch off in 30 minutes enter 3 and 0. The maximum sleep time is 99 minutes.

The green LED light will flash twice to indicate that the time is recorded.

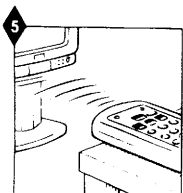

At the pre-set time the 4 in 1 will send an OFF command to the TV, Video or Satellite Receiver/Cable Box. You must leave the 4 in 1 pointing at your equipment for this function to operate.

Sleep function hints


To cancel the SLEEP command, press the POWER button.

The 4 in 1 is compatible with most models of the following makes of TV, Video and Satellite Receiver/Cable Box.


A	C	Firstline	Johansson	Network	RBM	Tandy
Admiral	Cabletime	Fisher	JSR	Neuhaus	Rediffusion	Tantec
Aiwa	Cambridge	Formenti	JVC	Nikkai	Rex	Tashiko
Akai	Century	Freecom	K	Noblako	RFT	Tatung
Akiba	CGE	Frontech	Kaisui	Nokia	Roadstar	TEC
Akura	Clatronic	Fuba	Kathrein	Normende	S	Technisat
Alba	Condor	Funai	Kendo	O	Saba	Televia
Aldes	Connexions	G	Kennedy	Oceanic	Saisho	Telecom
Allsat	Contec	Galaxis	Kolster	Okano	Sakura	Telefunken
Allorgan	Continental	GBC	Kriesler	Optex	Salora	Telemeister
Amstrad	Edison	GEC	Kyostar	Orix	Samsung	Televideo
Anitech	Crosley	Geloso	L	Osaki	Samsung	Tensai
Ankaro	Crown	General	Lasat	Otto-Versand	Sansui	Thomson
Ansonic	D	General	Lenco	Oxford	Sanyo	Thorn
Apollo	Daewoo	General	Leyco	P	Satcom	Tokai
Arcon	Dansai	Genexxa	Loewe Opta	Pace	Satford	Tonna
Aristona	Daytron	GMI	Logic	Palcom	Schaub	Toshiba
Armstrong	Decca	Goldstar	Logik	Palladium	Schrenz	Towanda
ASA	Desmet	Goldmans	Luma	Paltec	Lorenz	Triumph
Asat	DNT	Gorenje	Luxor	Panama	Sears	U
Astra	Drake	Graetz	M	Panasonic	SEG	Uher
Astro	Dual	Granada	Magnadyne	Pathe Cinema	SEI	Ultravox
Asuka	Dumont	Grundig	Magnafon	Pathe Marconi	Seleco	Uniden
Atlantic	Dynatron	H	Magnavox	Pentax	Senra	United
Audiosonic	E	Hanseatic	Manesth	Perdio	Sharp	Universum
Audioton	Echostar	Hantarex	Manhattan	Philco	Siarem	V
Aura	Elcitra	Heliocom	Marantz	Philips	Siemens	Vector
Autovox	Elcta	Hemmerman	Maspro	Phoenix	Sierra	Vestel
Axis	Elin	Hinari	Matsui	Phonola	Siesta	Victor
B	Elite	Hirschmann	M Electronic	Pioneer	Silva	Viewstar
Baird	Elman	Hisawa	Memorex	Portland	Sinudyne	Vortec
Bang &	Elta	Hitachi	Memphis	Prandoni-	Skantic	Voxson
Olufsen	Erres	Houston	Metronic	Prince	Skymaster	V-Tech
Barco	Etron	Huth	Metz	Prinz	Solavox	W
Barcom	Europa	Hyper	Minerva	Profex	Sonorol	Waltham
Blaupunkt	Europhon	H/K	Mitsubishi	Proline	Sony	Watson
Bluesky	Eurosat	I	Mivar	Prostat	Standard	Watt Radio
Brandt	Eurosat	Imperial	Multitech	Protach	Stella	Wega
Brion Vega	Eurospace	Ingelen	Murphy	PYE	Stern	White
British	F	Inno Hit	N	Q	Strong	Westinghouse
Telecom	Fenner	Interfunk	Naonis	Quelle	Sunkai	Winersat
Broadcast	Ferguson	Intervision	National	R	Sunwood	Wisi
BSR	Fidelity	Irradio	NEC	Radiola	Susumu	Y
BT Satellite	Filmnet	ITT	NECKermann	Radiomarelli	Syntrack	Yamishi
Bush	Finlandia	J	NEI	Radix	T	Yoko
	Finlux	Jerrold	Nesco	Rank	Taisho	Z
						Zanussi
						Zehnder

Battery installation


Quick set up guide

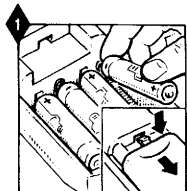


Insert 4 AAA batteries (Alkaline recommended) in compartment at the back of the 4 in 1. Do not use rechargeable batteries.

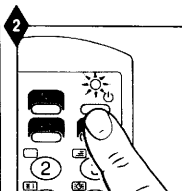

Press the POWER button. The green LED should light up. If the green LED does not light up check you have inserted the batteries correctly and the batteries are new.

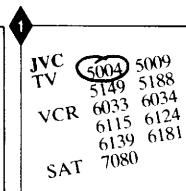


First turn on your TV set. Find your brand and equipment type in the list provided eg. JVC TV. Select the first 4 digit code, but DO NOT enter it yet. If your brand is not listed go to Autosearch.

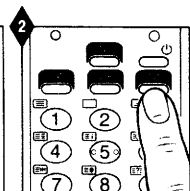

Press TV1 button on the handset.


Manual set up can only be used for TV, VCR, Satellite Receiver/Cable Box. Other equipment eg. Hi-fi, CD player must be set up using the learning facility.

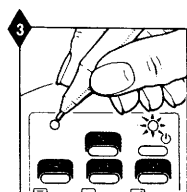


Press the small SET button with the tip of a pen for 2 seconds until the green LED light flashes on/off and then comes on again.



Enter the first 4 digit code. The green LED light will turn off. If LED flashes 3 times a code not on the list has been entered, try entering the code again. If you do not enter the 4 digit code within 20 seconds of pressing the SET button the LED light will switch off. Start again from step 2.

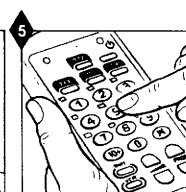

Point the 4 in 1 at your TV and check that all the functions available on original remote are now being controlled from the 4 in 1. If all of the functions operate correctly, write this TV code in the space provided on the back of the 4 in 1 and in the instruction manual. You will need this code again to programme the 4 in 1 when you change the batteries.

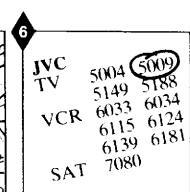

If all of the functions available on original remote do not operate correctly, an incorrect code has been entered. Select the next code from the list and repeat steps 2-5 until correct code is found. Repeat procedure for other equipment.

CUSTOMER HELPLINE FREEPHONE (0800) 895847