 


- Ⓞ **Universal Remote Control**
- Ⓣ **Télécommande Universelle**
- Ⓛ **Universelle Fernbedienung**
- Ⓢ **Mando A Distancia Universal**
- Ⓜ **Telecomando Universale**

5 IN 1

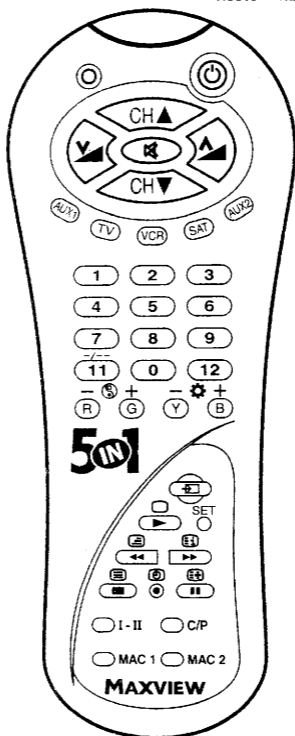 


URC5D

- Instruction Manual (P.1)
- Mode D'emploi (P.5)
- Bedienungsanleitung (P.10)
- Manual de Instrucción (P.16)
- Istruzioni per L'uso (P.21)



MAXVIEW

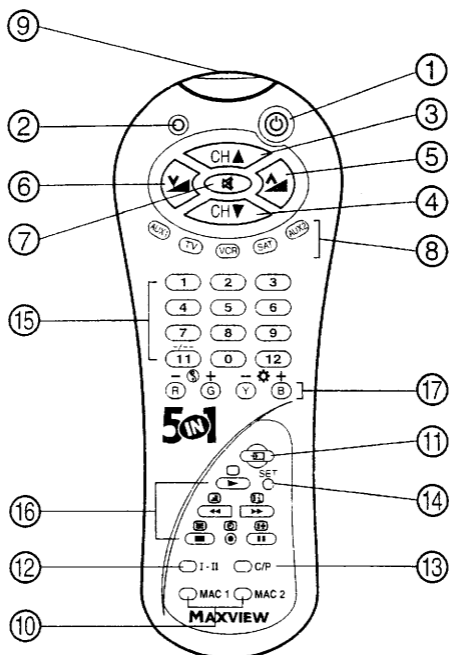

- | | | |
|---|--|--|
| 1. POWER key
Touche POWER
[Ein/Aus] Taste
Tecla POWER
Tasto POWER | 2. LED Indicator
Lampe témoin LED
LED-Lämpchen
Luz roja LED
Luce rossa LED | 3-4. Channel Up/Down
Touche Programme +/-
Programm +/-
Tecla Canal arriba/abajo
Tasto Canale avanti/indietro |
| 5-6. Volume Up/Down
Touche Volume +/-
Lautstärke +/-
Tecla Volumen +/-
Tasto Volume alto/basso | 7. Mute key
Touche silencieux
Stummschalt-taste
Tecla Silencio
Tasto Silenziamento | 8. Device keys
Touches d'appareil
Gerätetasten
Teclas de aparatos
I tasti apparecchio |
| 9. IR Transmitter
Fenêtre D'émission
Infrarot Fenster
Display Emisor
Finestra di Emissione | 10. Macro keys
Touches Macro
Macro-Funktionen
Teclas Macro
Tasti Macro | 11. TV/AV key
Touche TV/AV
TV/AV Taste
Tecla TV/AV
Tasto TV/AV |
| 12. Nicam
Stereo
Stereo Zweikanalton
Stereo
Stereo | 13. Channel/Program
CH/Programme
Kanal/Programm
Canal/Programario
Canale/Programmato | 14. SET-UP key
Touche SET
SET - Taste zur Code-Eingabe
Tecla Set-Up
Il tasto Set-up |
| 15. Number Keys (0-9,-/-.10,20)
Touches numériques (0-9,-/-.10,20)
Tasten 0-9, -/- Umschalttaste für Programme ab 10, 20
Teclas de números (0-9,-/-.10,20)
I tasti numerici (0-9,-/-.10,20) | | |
| 16. Video Recorder keys and Teletext keys
Touches Magnétoscope et Touches Télétex
Tasten für Videorekorder-Grundfunktionen und Videotext
Teclas para funciones VCR principales y Teclas Teletexto
I tasti Videoregistratore e Tasti Televideo | | |
| 17. Keys for Color +/-, Brightness +/- and Fasttext keys
Touches pour Couleur +/-, Luminosité +/- et Touches Fasttext
Tasten für Farbe +/-, Helligkeit +/- und Toptext-Funktionen
Teclas para Color +/-, Brillo +/- y Teclas texto rápido
I tasti per Colore +/-, Luminosità +/- e Tasti Fasttext | | |

■ OPERATION INSTRUCTION

Thank you for purchasing the **URC5D** remote control. Before you can use your new remote, you will need to program it to operate the specific A/V home entertainment equipment you wish to control. Simply enter the proper device codes for your equipment and it is ready to use.



 

■ BATTERY INSTALLATION/CHANGE

1. On the back of the **URC5D**, pull the battery compartment cover.
2. Insert two (2) AAA new **Alkaline** batteries.
3. Match the (+) and (-) poles correctly aligned into the battery compartment.
4. Close the battery compartment.


Note : Removing the batteries for more than 2 minutes will require you to reprogram your remote.

■ SETTING UP BY DIRECT ENTRY

To program your **URC5D** to operate your TV :

1. Turn on your TV.
2. Press & hold the **SET**  key and press the **TV**  key once. At this time, the red LED light will light on.
3. Release from the **SET**  key and **TV**  key.
4. Enter the 3-Digit TV code from the code list for your brand equipment.






* If you perform this procedure correctly, the red LED light will go out. Otherwise, the red LED flashes 2 times.

5. Aim the **URC5D** at your TV and press the **POWER**  key. Your TV should turn off. If none of the keys or only some of the keys operate your TV, repeat Steps 2-4, trying each code listed for your brand until you find the one that operates your TV.
6. Your **URC5D** is now programmed to operate your TV. Write down your TV code on the label at the back of the **URC5D** for future reference.
7. To program other equipment, repeats the Steps 1-6 for your VCR, SAT, AUDIO and or your second TV or VCR.






 
Note : To leave the SETUP during the code entering, just press any of the [DEVICE] keys once. In other case, if no code entering within 10 seconds, the red LED light will go out automatically.

■ SETTING UP BY AUTO SEARCH

This auto search method checks all its preprogrammed codes to find the code that will operate your equipment automatically. This method may takes a few minutes.

 
 


 

1. Turn on your TV and press the device mode as **TV** .
2. Aim the **URC5D** at your TV.
3. Press & hold the **SET**  key and **POWER**  key at the same time for 4 seconds until the red LED light on. Then release the **SET**  key and **POWER**  key. **AUTO SEARCH** is now performed.









 
4. If the TV turn off. This indicates that the **URC5D** is now set to your TV.
5. Press any key to exit and the red LED will go out automatically. The **URC5D** is now ready to operate your TV.
6. To check the code, press **POWER**  to ON position. Press **CH+/-**   , **VOL +/-**   ,  , and other applicable keys. If no function, repeat Steps 1-5.
7. To program other equipment, repeats the Steps 1-6 for your VCR, SAT, AUDIO and or your second TV or VCR.



■ SETTING UP BY MANUAL SEARCH

This manual search method checks all its preprogrammed codes to find the code that will operate your equipment. This method may takes a few minutes.

1. Turn on your TV.
2. Press & hold the **SET**  key and press the **TV**  key once. At this time, the red LED light will light on.
3. Release from the **SET**  key and **TV**  key.
4. Again press the **SET**  key once, the red LED light will flash continuously.
5. Aim the **URC5D** at your TV.
6. Now, press & release **POWER**  key until the TV turns off. This indicates that the **URC5D** is now set to your TV.

Hint : During the Manual Search mode, you can use the **SET**  key as forward/backward toggle switching to locate the correct code of your TV in a quick way.



 



7. Press the **[DEVICE]** key once. The red LED will go out automatically. The **URC5D** is now ready to operate your TV.
8. To check the code, press **POWER**  to ON position. Press **CH+/-**   , **VOL +/-**   ,  , and other applicable keys. If no function, repeats Steps 1-8.
9. To program other equipment, repeats the Steps 1-8 for your VCR, SAT, AUDIO and or your second TV or VCR.

Note 1 : For VCR or AUX, press & release either **POWER**  or  key.

Note 2 : To leave the **MANUAL SEARCH** during the code searching, just press any of the **[DEVICE]** key once. In other case, if no code entering within 30 seconds, the red LED light will go out automatically.

■ SETTING UP BY LEARNING

Your **URC5D** is preprogrammed for use with most of your equipment of TV, VCR, Satellite Receiver, Cable Box, CD, & AUDIO. Because of the limited number of key available, some function may not be included. You may teach your **URC5D** with the original remote control to operate any function. Choice is Yours! Besides the preprogrammed method, you may also teach your **URC5D** to operate any other IR controlled equipment and appliances.

1. Press & hold the **SET**  key and press the **[DEVICE]** key (e.g. **TV** ). At this time, the red LED light will light on.
2. Release from the **SET**  key and the **[DEVICE]** key.
3. Place the original remote control towards your **URC5D** lens-to-lens on a flat surface 3-5 CM apart. Be sure the original remote control is with fresh batteries.
4. Enter the 3-Digit number of    and the red LED light will light on.
5. Press & release the desired key on your **URC5D** you want to be programmed the command. Now, the red LED flashes.

NOTE : DO NOT LEARN ANY OF THE [DEVICE] KEYS

If no entering of key command from the original remote control within 15 seconds, the Learning Mode will go out automatically.

6. Press & hold of the corresponding key on the original remote control to be memorized. The red LED flashes one time when the command has been transferred OK. Release from the key. The red LED flashes again for next learning. Otherwise, press any of the **[DEVICE]** key once or no entering of key command from the original remote control within 30 seconds, the Learning Mode will go out automatically.

Note : If the red LED blinking for three times and remain light on, it shows ERROR during the learning process. You may have to adjust and align both remotes, and try for step 5 to 6 again.



7. Repeat step 5 to 6 to transfer other signal into next desired function key for the **URC5D** until the memory is full.
8. If the red LED blinking for six times and remain light on, it shows the memory is full. You may repeat one more time on same key follow step 5 to 6 again. Or press any of the **[DEVICE]** key once, the Learning Mode will go out automatically.
9. After all the desired function keys are programmed, press any of the **[DEVICE]** key once, the Learning Mode will go out automatically.

Caution : Entering a new preprogrammed code number will erase and replace all learned commands in the desired device mode automatically.

■ MACRO FOR ONE-TOUCH

Your **URC5D** is capable to produce a sequence of 15 keys command (maximum) into one **[MACRO]** key function (**MAC 1** or **MAC 2**). This allows you to use one key touch for the routine start of all your home entertainment equipment. It's really no limit like a freeway.

To Setup the MACRO function :

1. Press & hold the **SET**  key and press the desired **[MAC]** key once. E.g.: **MAC 1** or **MAC 2** .
2. At this time, the red LED light will light on.
3. Release from the **SET**  key and desired **[MAC]** key.
4. Enter the desired key commands (up to 15 commands) in order for one touch MACRO function.



5. After the desired key commands are entered. Press and release from the desired [MAC] key. The red LED will light off.
- Note :** If the entering of command keys are over 15 keys during the setup of MACRO function or no press of command key within 30 seconds, the red LED will light off automatically. It is assumed the setup of MACRO function is OK.

For Example :

SET + > TV > POWER > TV/AV > VCR > POWER > PLAY > TV > .

To Erase the MACRO function :

1. Press & hold the SET key and press the desired [MAC] key once. E.g.: or .
2. At this time, the red LED light will light on.
3. Release from the SET key and [MAC] key.
4. Press again the desired [MAC] key once. The MACRO function will cancel.

■ PUNCH THROUGH

It allows you to operate TV's VOLUME and function simultaneously without having to switch the device modes repeatedly. You can adjust the TV sound source while you are operating the VCR or Satellite Receiver. Right at your fingertips.

■ TELETEXT AND FASTTEXT

The function of *TELETEXT* and *FASTTEXT* should operate exactly as your original remote.

■ PREPROGRAMMED CODE DISPLAY

This method displays its 3-digit preprogrammed codes that will operate your equipment. You can control the display of each position in an easy way. For example, press key for 1st digit of code, press key for 2nd digit of code and press key for 3rd digit of code.

1. Select the desired [DEVICE] key.
2. Press & hold the SET key, then press the desired digit code you want to display.
3. Release the SET key.
4. The red LED will flash in accord to the count of digit code. (No flash for digit 0).
5. Repeat Steps 2-4 for next display.

■ TECHNICAL SPECIFICATIONS

Communication Mode :	Infrared (Transmitter and Receiver)
Power Requirement :	3V (2 x AAA, IEC-LR3, UM-4 size alkaline batteries)
Effective Range :	7M, ±20 degrees
Max. Operating Temperature :	0°C to +50°C
Max. Storage Temperature :	-25°C to +125°C
Dimension :	63(W) x 28(H) x 173(L) mm
Weight (without batteries) :	92 g.

Codes / Códigos / Codici

Brand/Device	TV	VCR	CABLE/ SATELLITE	HIFI	CD	LD/ DVD	AUX
AB			601				
ABC			601				
Admiral	032.155						
Aiwa	251						
Akar	005.159	300.301.302.312, 339.340					
Alba			536				
Albrail	001						
Alfa Gold			600				
Alpha Star			611				
Amstrad	006		500.501.537				
Anitech		341					
Ankaro			502				
Apollo			531				
Arc En Ciel (F)	065.067.075.078.098, 100.103.185.186.222	301.304.310.323, 348.353.354.358					
Aristona	003.026.027.046.073, 113.115.155.191.192, 223.230.242	309.333.364.365, 378	531.552.553, 594.615.616		725, 726	732	735, 738
Arthur Martin	005.047.048.055.066, 069.069.070.076.082, 086.097.162.177.195, 211.241.242	314.316.344	520.546				
ASA	007.009.013.032.094, 155.161	313					
Astra			501.538				
Atlantic	003.008.025.037.038, 159						
Audiosonic	160						
Aura			558				
Ausind	008						
Autovox	003.007.012.014.015, 078.079.104.153						
AWA	033.159.160.169.220						
Baird	162	302.304 304					
Bang & Olufsen							
Barcom			502				
Basic Line	163						
Baur	005.010.026.052.055, 069.081	306.309.316					
Beko	226						
Benjamin			585				
Blaupunkt	010.017.018.020.054, 231.232.233.234.236, 241	303.305.306.342, 378		741			
Brandt Electronique	065.067.075.078.098, 100.103.185.186.222	301.304.310.323, 348.353.354.358					
Brionvega	104.155.164.165.200, 201.248	307.314					
Bruns	158						
BSR	016.019.021						
Bush (UK)	022	312	531				
Cabletime	238.239.243						
Cambridge			504				
Canal +			595				
Century	145.146.155						
CGE	019.023.024.145.151, 169.170.231	301.308					
CGM	093	322					
Chaparral	216		503.539				
Clarivox	001.166.167						
Columbus			525				
Condor	003.008.025.037.038, 159						
Contec	016						
Continental Edison (F)	065.067.075.078.098, 100.103.185.186.222	301.304.310.323, 348.353.354.358					
Crosley	024.025.145.155.231						
CTC Clatronc	096						
Daewoo	168.209					754	
Dansar		312					
Decca (UK)	002.003.026.028.031, 249	309					
Digit DTH			608				
DNT			538.556.558				
Doric	116						
Drake			505.603				
Dual	246.249	304.310					
Dual-Tec	003.011.019.029						
Duja-Tech	088.098.109.116	318.328.338	668				
Dumont	155						
Dumont-Fintux	007.008.009.013.025, 026.029.035.094.161, 169.221	309	542.543				
Dynasat			588.589				
Echostar			506.507.508, 515.538.540, 574.575.577, 578.579.591, 612				
Elbe	001.171	343					
Elicit	019.025.029.057.147, 150.155						

Codes / Códigos / Codici

Brand/Device	TV	VCR	CABLE/ SATELLITE	HIFI	CD	LD/ DVD	AUX
Electro Tech	033						
Elin		320					
Elite	108						
Elman	019,029						
Elta Sat			515				
Emerson	146,155	317					
Emme Esse			580,581,582				
Europhon	003,019,029,030,146						
Eurosky			549				
Eurostar			582				
Fenner	033,193,240						
Ferguson	001,135,136,137,140, 144,148,152,160,186, 229,247	301,304,310,323, 348,353,354,358	523,524,529, 530,531,561				
Fidelity (UK)	003,034,229						
Filmnet	202,240						
Finlux	007,008,009,013,025, 026,029,035,094,161, 169,221	309	542,543				
Fisher	025,036,155,167,170, 246	311,344,345,346		702	719		
Formenti-Phoenix	003,008,025,037,038, 159						
Fortec Star			598,599				
Fracarro			509,510				
France Telecom	027						
Freecom			554				
FTE			528				
Fuba			541				
Funai	016,160	308					
GBC	002,003,019,025,026, 031,033,039,040,041, 042	312					
GEC (UK)		309					
Geloso	003,019,025,032,033, 039,150	312					
Giucar Record			511,544				
Goldstar	003,043,080,102,105, 153,172,244	313					
Gorenje	170,173						
Graetz	005,032,040,041,045, 049,069,071,072,074, 076,162,168,176,177	301,304,307,321, 322,323,346	513,514,546, 597				
Granada (UK)	002,003,026,041,044, 045,046,047,048,049	303,309,314,344, 378					
Grundig	003,010,018,020,045, 050,051,053,054,056, 094	303,306,315,378	512,529,531				
Haitai					721		
Hanseatic	025,026,037,044,052, 055,249	309,316					
Hantarex	213						
Hemmermann	057						
Hifivox (F)	065,067,075,078,098, 100,103,185,186,222	301,304,310,323, 348,353,354,358					
Hinari	033,044,058,059,060	312,317,318,347					
Hirschmann			543				
Hitachi	003,040,041,042,044, 047,055,061,062,063, 064,065,066,067,068, 174,221,222	304,312,316,319	613,614				
HTS			612				
Hughes			613,614				
Huth			549				
Hwalin			607				
Hyper	003,033,153,193						
ICX International			545				
Imperial	019,023,024,145,151, 169,170,231	308,320					
Ingelen	005,032,040,041,045, 049,069,071,072,074, 076,162,168,176,177	301,304,307,321, 322,323,346	513,514,546, 597				
Inker					714		
Inno Hit	003,031,043,060,146, 175						
Interfunk	005,026,040,045,046, 052,069,071,073,075, 155	309,321					
Irradio	008,039,043,060,153, 245						
ITT-Nokia	005,032,040,041,045, 049,069,071,072,074, 076,162,168,176,177	301,304,307,321, 322,323,346	513,514,546, 597				
Janco	241,242						
Jeemon			515				
Jerrold			545,571,610				
Johansson			516				
JVC	077,119,178,179	301,304,323,348, 349,350,351,358			758		
Kaisui	163						
Kamosonic	003						
Kapsch	005,032,040,041,045, 049,069,071,072,074, 076,162,168,176,177	301,304,307,321, 322,323,346	513,514,546, 597				

Codes / Códigos / Codici

Brand/Device	TV	VCR	CABLE/ SATELLITE	HIFI	CD	LD/ DVD	AUX
Karcher Kaitrein	159.163.175		517,518,519, 547		722		
Kendo Kennedy Kenwood	146 025.078.079			700, 733, 734, 739, 740	723	745, 757	
Konka Korting Kriesler	252 037.155.157 003.026.027.046.073. 113.115.155.191.192. 223.230.242	309.333.364.365, 378	531,552,553, 594,615,616		725, 726	732	735, 738
Lenco	033.039.183.238.239, 240	355	551,554		722		
Lensior Loewe opta	003 052.081.155.156.189, 213.242	303,309,378					
Logik Luma Luxor	028 032.082 005.045.047.055.068. 083.084.085.086.087. 162.177	318.352 352 316.322	513.520.521		701		
Macab Magnadyne	019.025.029.057.147, 150.155		548				
Magnaton Magnasonic Magnavox	003.006.029.030 003.026.027.046.073, 113.115.155.191.192, 223.230.242	322 309,333,364,365, 378	531,552,553, 594,615,616		725, 726	732, 744	735, 738
Marantz Mascot Maspro	026 145	303,309,332	517,522,531, 587				
Matsui Maximal Meletronic Memorex Metz	003,006,028,041,088 053 246 018.053,089,090,091, 155,180,183	318,352,362 313,344 303,306,325,378, 379	512				
Minerva Mission Mivar	010,018,045,051,053 003,093,094,095,149	303,306,376	512,529			756	
Morgans Multisystem Multitech Murphy (UK) Naonis	159 096.170,172 041 011,021,032,078,079, 118	312,355 304,323,349	549				
National	001,003,019,037,040, 106,110,111,114,190, 241	305,321,342	617	711		746, 747, 749	
NEC Neckermann	184 003,026,044,055,082, 097,170	304,343,350 301,303,304,309, 316,317,378	550,590 549		724		
N.E.I. Network Noblisko Nogomatic	166 003,008,029,051,146 065,067,075,078,098, 100,103,185,186,222	303,378 301,304,310,323, 348,353,354,358	523				
Nokia	005,032,040,041,045, 049,069,071,072,074, 076,162,168,176,177	301,304,307,321, 322,323,346	513,514,546, 597				
Noramende	065,067,075,098,099, 100,101,103,104,134, 185,186,222	301,304,310,323, 326,327,328,348, 349,351,353,354, 356,357,358,359, 360		708, 722			
Obritech Oceanic (F) Olympus Onceas Onkyo	005,040,106,107 003	305	554				
Orion	006,016,028,057,088, 108,109,187,188,189	317,318,352,361, 362,363 313					
Osaki Otto Versand Pace	025,026,044,052,055	309,316	523,524,529, 531,605				
Pael Palcom Palladium Palsat Panasat Panasonic	003,008 197	302,312	525 549 551 610 617				
Pansat Pathe' Marconi (F)	001,003,019,037,040, 106,110,111,114,190, 241 065,067,075,078,098, 100,103,185,186,222	305,321,342 301,304,310,323, 348,353,354,358	572	711		746, 747, 749	

Codes / Códigos / Codici

Brand/Device	TV	VCR	CABLE/ SATELLITE	HIFI	CD	LD/ DVD	AUX
Pausa	033						
Penny		343					
Pentax		319					
Philco	019.023.024.025.151. 155.169.170.231						
Philex	229						
Philips	003.026.027.046.073. 113.115.155.191.192. 223.230.242	309.333.364.365. 378	531.552.553. 594.615.616		725. 726	732. 744	735. 738
Phoenix	003.008.025.037.038. 159						
Phonola	175	309.365					
Pioneer	026.067.243	309.350.364.365		718	727. 728	744. 750	
Polestar	214						
Prandoni-Prince	008.032.146						
Praxis	217						
Premier			593				
Primestar			571				
Prince	008.032.146						
Prosat	001		534.570				
Proton					726		
PYE		350					
Quartz		344					
Quasar	003.008.029.030.043						
Quelle	003.005.007.008.009. 010.013.016.026.028. 045.050.051.052.069. 094.153.221.231.232. 234.235.236	303.306.309.317. 329.378	512				
Radiola (F)	003.026.027.046.073. 113.115.155.191.192. 223.230.242	309.333.364.365. 378	531.552.553. 594.615.616		725. 726	732. 744	735. 738
Radiomarelli	019.025.029.057.147. 150.155						
Radionette	013.035.040.221	321			722		
Radiotone							
Radix			538.556.558				
Rank (UK)	022						
RBM (UK)	022.094						
RCA	204.210		569.620			755	
Rediffusion (UK)	005.041.116						
REX	011.021.032.078.079. 118	304.323.349					
Roadstar	039						
Robotron	158						
RTF	158						
Rotel					726		
Saba	065.067.075.085.098. 099.100.103.117.155. 185.186.222.224	301.304.310.323. 326.348.349.351. 356.366.357					
SAE					726		
Saisho	003.006.028.088.182	317.318.352.362					
Sakura			526.527				
Salora	005.047.048.055.066. 068.069.070.076.082. 086.097.162.177.195. 211.241.242	314.316.344	520.546				
Sambers	003.008.029.030.043						
Samsung	026.033.043.112.128. 159.160.170.175.194. 212.215.253	320.380	576				
Sansui		350					
Sanyo	013.031.044.074.119. 120.121.122.162.167. 170.182.195.205	322.344.346.368		712			
SAT 100			501				
Sateco			554				
Schaub Lorenz	005.032.040.041.045. 049.069.071.072.074. 076.162.168.176.177	301.304.307.321. 322.323.346	513.514.546. 597				
Schneider	003.011.015.019.025. 036.036.245.246.249	309.312.320					
Scientific Atlanta			606				
Sears		345					
SEG	096	312.320					
Seleco	011.058.078	339					
Senta		308					
Sharp	044.054.119.124.196. 198.225.227	332.333.370		739	723		
Sherwood				713. 714			
Shinton		312					
Siarem	025.029.155						
Sicatei	001						
Siemens	010.231.232.233.234. 236	303.306.322.378	512				
Siera	003.026.027.046.073. 113.115.155.191.192. 223.230.242	309.333.364.365. 378	531.552.553. 594.615.616				
Siesta	004						
Silver	160						
Singer	025.029.147.155						

Codes / Códigos / Codici

Brand/Device	TV	VCR	CABLE/ SATELLITE	HIFI	CD	LD/ DVD	AUX
Sintrack			555				
Sinudyne	006,016,025,026,029, 057,109,125,155,192, 197	309,318					
Sonoko	033						
Sony	028,119,126,127,129, 130,182,199,228,250	329,330,369,371, 372	619	703	729, 730, 748	748, 752	736, 742, 748
Stern	011,021,032,078,079, 118	304,323,349					
Strong			528,551,554				
STS			522				
STV			541				
Sun Moon Star			604				
Sylvania					726		
Tadiran			609				
Tai Wah	218,219						
Tandberg	016,027,180	352					
Tantec			525				
Tatung	002,003,026,028,031, 131	309				753	
Tec	003,011,019,029						
Technics				715	731		
Technisat			538,556,557, 558,559				
Technosat			584				
Technovision	123						
Tedalex			583				
Tele + 1	240						
Teleavia	065,067,075,078,098	301,304,310,323, 348,353,354,358					
Telefunken	067,075,098,132,133, 134,135,140,185,186, 231,235	301,304,310,323, 348,349,351,353, 360,373,374,375					
Telemax			560				
Telemeister		308	527,538,556, 558				
Teleservice	203,238						
Televideon	003,008,025,037,038, 159						
Thomson	065,067,075,078,098	301,304,310,323, 348,353,354,358					
Thorn-Ferguson	001,135,136,137,140, 144,148,152,160,186, 229,247	301,304,310,323, 348,353,354,358	523,524,529, 530,531,561				
TMK		317					
Tonsai		312					
Toshiba	022,044,094,119,138, 139,141,142	304,323,337	618			744, 751	
TPS			596				
Trans Continens	008,032,146						
Tristar	229						
Uher	011,012,036,037,038, 078,246	304,320					
Ultravox	003,025,082,096,146, 155	307					
Uniden			532,533,535, 615,616				
Universum	094,160,221						
Univox	001						
US Electronics			545				
Vector		343	558				
Vegavox	169						
Victor		348,358					
Video		343					
Vortic Star			592				
Voxson	032,155						
Vtech			562				
Wallham	063						
Watson	037						
Watt Radio	001,003,025,029,030, 057						
Wega Color	119,143						
Westinghouse	003,008,025,037,038, 159						
Weston	019						
White WestingHouse	003,037,159						
Winersat			516,568				
Wisi			538,548,563, 564,565,566, 567				
Xenon		352					
Yahama				716, 717			
Yoko	003,159						
Zanussi	011,021,032,078,079, 118	304,323,349					
Zehnder			519				
Zenith	203,237						743, 751
Zoppas	011,021,032,078,079, 118	304,323,349					