

CE

Model URC101

MAXVIEW
Teletronics

Solo

TV Remote Control

User instruction guide


The Maxview Solo TV Remote Control is designed to replace the basic functions of your original TV remote control.



These functions are the numeric, mute, power, programme up/down and volume up/down. However, if your original TV remote does not have one of these functions eg. mute, you will not be able to access that function on the Solo TV Remote Control.

Teletext and Fastext operations and secondary functions such as brightness and contrast are not available on this model.

The Solo TV Remote Control is pre-programmed with an extensive library of infra-red codes for easy set up by simply entering a code or by using the Autosearch facility. It is important that the Solo TV Remote Control is set up properly otherwise it will not function correctly.

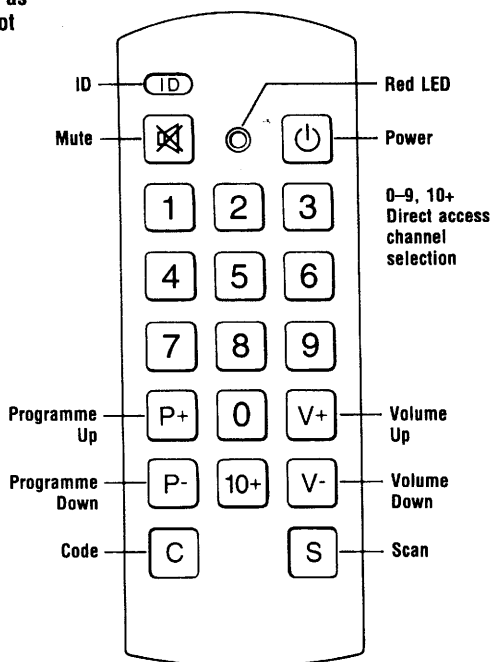Should you have any difficulty setting up your Solo TV Remote Control, please contact our Freephone Customer Helpline on (0800) 895847.




ID	To identify code found
LED	LED will flash red during operation of Solo TV Remote Control
	To turn sound ON/OFF
	To turn equipment ON/STANDBY
0 to 9, 10+	For direct access channel selection
P+	To change programme or channel up
P-	To change programme or channel down
V+	To increase sound volume
V-	To decrease sound volume
C	To programme the unit
S	To access the autosearch facility

MAXVIEW LIMITED · SETCHEY · KING'S LYNN · NORFOLK · PE33 0AT · ENGLAND
☎ FREEPHONE CUSTOMER HELPLINE (0800) 895847


e-mail: maxview@globalnet.co.uk web site: www.maxview.ltd.uk

Battery installation

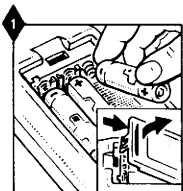


Insert 3 AAA batteries (Alkaline recommended) in compartment at the back of the remote control. Do not use rechargeable batteries.

NB. The remote control will need reprogramming each time the batteries are changed. Always change all of the batteries at the same time.

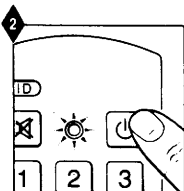


Press the POWER button. The red LED should light up. If the red LED does not light up check you have inserted the batteries correctly and the batteries are new. Remove the batteries if you do not plan to use the remote control for a long period of time.


Manual set up

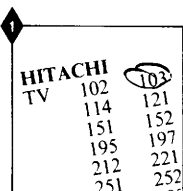


First turn on your TV set and select any channel. Find your brand in the list provided eg. Hitachi TV. Select the first 3 digit code, but DO NOT enter it yet. If your brand is not listed go to Autosearch.

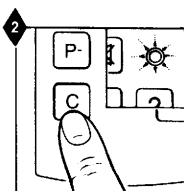


Press the CODE (C) button until the red LED light comes on.

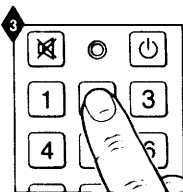

Enter the first 3 digit code slowly. The red LED will flash off then on for each digit entered and then turn off. If LED flashes rapidly a code not on the list has been entered, try entering the code again. If you do not enter the 3 digit code within 15 seconds of pressing the CODE button the LED light will switch off. Start again from step 2.

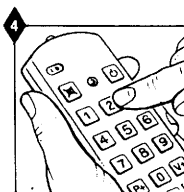

Point the remote control at your TV and check that the numeric, mute, power, programme up/down and volume up/down functions operate correctly. If these functions operate correctly, write this TV code in the space provided on the back of the remote control and in the instruction manual. You will need this code again to programme the remote control when you change the batteries.

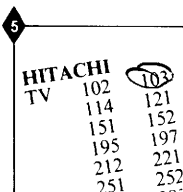

If these functions do not operate correctly, an incorrect code has been entered. Select the next code from the list and repeat steps 2-4 until correct code is found.


Manual set up hints

If none of the codes for your TV operate satisfactorily, try Autosearch to set up the remote control.


If your equipment brand is not listed try looking at the back of the equipment to see if it was made by another manufacturer and enter these corresponding codes or use Autosearch to set up the remote control. Alternatively, call the Freephone Helpline and state your equipment brand, model number and if possible the reference of the original remote.

If you have any further questions call the Freephone Customer Helpline on (0800) 895847.


Code read out

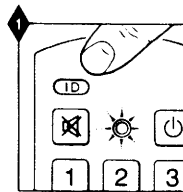


Press the ID button. The red LED will flash once to show it has entered the Code read out mode.

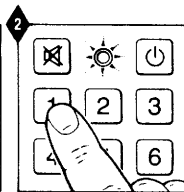

Press the number 1 button. The red LED light will flash several times to identify the first digit of your code. E.g. if LED light flashes 5 times the digit is 5, if LED flashes 10 times the digit is 0.

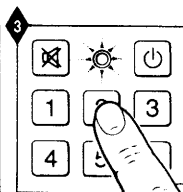

Press the number 2 button to identify the second digit.

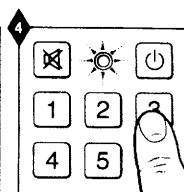


Press the number 3 button to identify the third digit. Write the code of your equipment in the space provided opposite.

Code read out tips


If you do not press buttons 1, 2 and 3 in sequence, the red LED will flash rapidly and the remote control will exit the code read out mode.

If you do not press a button within 15 seconds of pressing the ID button, the red LED will flash rapidly and the remote control will exit the code read out mode.


Autosearch

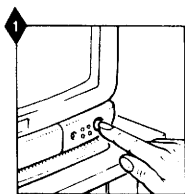


1 Switch on TV and select any channel.

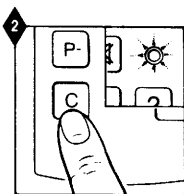


2 Press the CODE (C) button. The red LED light will turn on.

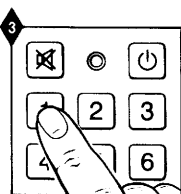


3 Enter the code 100 in order to reset the unit. The red LED will flash off then on for each digit entered and then turn off.

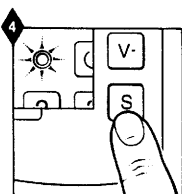


4 Press the SCAN (S) button once. The red LED will turn on to show it has entered the Autosearch mode.

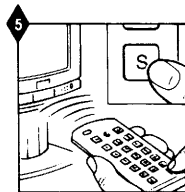


5 Point remote control at TV and press the SCAN (S) button a second time to start the search. The red LED light will flash every time it sends codes one by one to the TV.

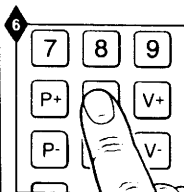


6 When TV switches off press any button to exit the Autosearch mode. The LED will turn off (see Autosearch set up hints). Please be patient as the remote has many codes to call up from the library. It takes around 20 minutes to complete the scanning of the whole TV code list.

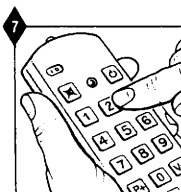

7 Switch on TV and select any channel. Point the remote control at your TV and check that the numeric, mute, power, programme up/down and volume up/down functions operate correctly.

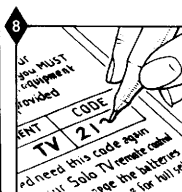

8 If these functions operate correctly, identify the selected code with the CODE READ OUT method (see opposite page) and note it immediately in the space provided on the back of the remote control and in the instruction manual.

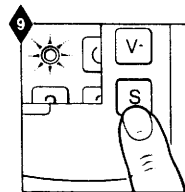

9 If all of the functions do not operate correctly, an incorrect code has been selected. Repeat steps 4-8 until correct code is found.

Autosearch set up hints

If the red LED light flashes rapidly, you have reached the end of the code list and the remote control will exit the Autosearch mode.

Ensure that you use the CODE READ OUT method and write down your code as you will need this code to reprogramme the remote if you change the batteries.

If your TV has any adverse reaction whilst Autosearching eg. Channel changing. This is normal. Ignore these reactions until the equipment finally switches off.

You must exit the Autosearch mode as soon as your equipment switches off by pressing any button. If you do not react quick enough the remote control will continue sending codes to your equipment. If this happens, switch on TV and select any channel, press the SCAN (S) button, the LED will come on and press slowly and repeatedly the PROGRAMME DOWN button to step backwards through the codes. The LED will flash every time you press the PROGRAMME DOWN button. When your equipment switches off again, press any button to exit the Autosearch mode and try functions to see if they operate correctly.

If you press an invalid button (all buttons except SCAN, PROGRAMME UP AND PROGRAMME DOWN), the LED will flash rapidly and the remote control will exit the Autosearch mode.

If you have any further questions call the Freephone Customer Helpline on (0800) 895847.


EQUIPMENT	CODE

Please write the code for your equipment in the space provided. You will need this code again to reprogramme your remote control when you change the batteries.

The Solo TV remote is compatible with most models of the following makes of TV.


A	Continental	Geloso	Lenoir	Orion	RFT	Tatung
Admiral	Edison	General Technic	Loewe Opta	Osaki	Roadstar	TEC
Akai	Crosley	Genexxa	Logic	Otto Versand	S	Technisat
Akura	Crown	Goldstar	Logik	P	Saba	Teleavia
Alba	D	Goodmans	Luma	Pael	Saikou	Telefunken
Albiral	Daewoo	Gorenje	Luxor	Palladium	Saisho	Telemeister
Amstrad	Dansai	Graetz	M	Panama	Salora	Televideo
Anitech	Decca	Granada	M Electronic	Panasonic	Sambors	Tensai
Ansonic	Desmet	Grundig	Magnadyne	Pathe Cinema	Samsung	Thomson
Arcen Ciel	Dual	H	Magnafon	Pathe Marconi	Sansui	Thorn
Aristona	Dumont	Hanseatic	Marantz	Perdio	Sanyo	Thorn-Ferguson
Arthur Martin	Dynatron	Hantarex	Manesth	Philco	Schaub Lorenz	Togoshi
ASA	E	Hemmerman	Matsui	Philips	Schneider	Toshiba
Atlantic	Elbe	Hifivox	Maximal	Phoenix	Seisynudine	Towada
Aucun	Elicit	Hinari	Memorex	Phonola	Seleco	Transcontinents
Audiosonic	Elicite	Hisawa	Memphis	Pioneer	Sharp	Triumph
Audioton	Elin	Hitachi	Metz	Prandoni Prince	Siaem	U
Autovox	Elite	Hyper	Minerva	Prince	Sicatel	Uher
B	Eta	I	Mitsubishi	Prinz	Siemens	Ultravox
Baird	Erres	Imperial	Mivar	Profex	Sierra	Universum
Bang & Olufsen	Etron	Ingelen	Multitech	Proline	Singer	Univox
Barco	Europhon	Inno Hit	Murphy	Protech	Sinudyne	V
Basicline	F	Interfunk	N	PYE	Skantic	Vestel
Blaupunkt	Fenner	Intervision	Naonis	Q	Solavox	Vidion
Boots	Ferguson	Irradio	National	Quasar	Sony	Vortex
Brandt	Fidelity	ITT Nokia	NEC	Quelle	Stag	Voxson
Brian Vega	Finlandia	J	Neckermann	R	Standard	W
Bruns	Finlux	JVC	NEI	Radiola	Stern	Watson
BSR	Firstline	K	Nikkai	Radiomarelli	Sunkai	Watt Radio
Bush	Fisher	Kasui	Nobiiko	Radio Shack	Sunwood	Wega Colour
C	Formenti	Kendo	Nogamatic	Rank	Susumu	White
Century	Frontech	Kennedy	Nokia (see ITT)	RBM	Synudine	Westinghouse
CGE	Funai	Kolster	Nokia	Rediffusion	T	Y
Clarivox	G	Korting	Normende	Rex	Tandberg	Yoko
Clatronic	Galaxis	Kriesler	O	Robotron	Tandy	Z
Condor	GBC	L	Oceanic		Tashiko	Zanussi
Contec	GEK	Lenco	Onceas			Zoppas

Battery installation

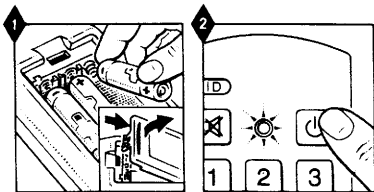


Insert 3 AAA batteries (Alkaline recommended) in compartment at the back of the remote control. Do not use rechargeable batteries.

 Press the POWER button. The red LED should light up. If the red LED does not light up check you have inserted the batteries correctly and the batteries are new.

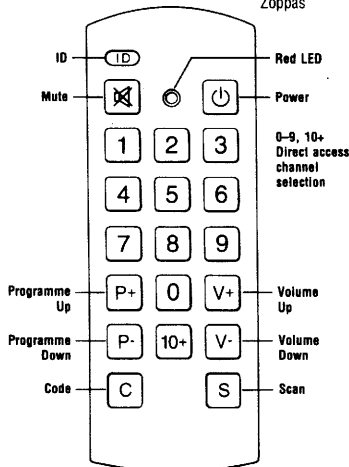

Quick set up guide

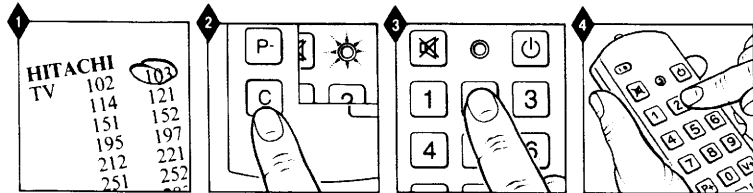

First turn on your TV set and select any channel. Find your brand in the list provided eg. Hitachi TV. Select the first 3 digit code, but DO NOT enter it yet. If your brand is not listed go to Autosearch.

Press the CODE (C) button until the red LED light comes on.

Enter the first 3 digit code slowly. The red LED will flash off then on for each digit entered and then turn off. If LED flashes rapidly a code not on the list has been entered, try entering the code again. If you do not enter the 3 digit code within 15 seconds of pressing the CODE button the LED light will switch off. Start again from step 2.

Point the remote control at your TV and check that the numeric, mute, power, programme up/down and volume up/down functions operate correctly. If these functions operate correctly, write this TV code in the space provided on the back of the remote control and in the instruction manual. You will need this code again to programme the remote control when you change the batteries.

5	HITACHI	103
TV	102	121
	114	152
	151	197
	195	221
	212	252
	251	

If these functions do not operate correctly, an incorrect code has been entered. Select the next code from the list and repeat steps 2-4 until correct code is found (see manual set up hints).

**CUSTOMER HELPLINE
FREEPHONE (0800) 895847**