



## Connecting Coaxial Cable (Not supplied)

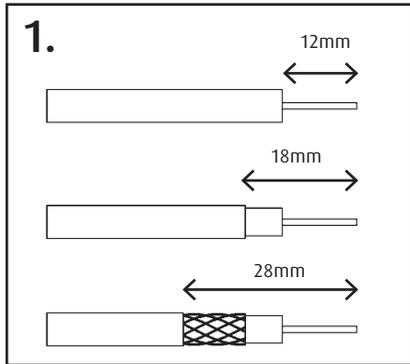

Using a sharp knife prepare the Coaxial Cable as shown.

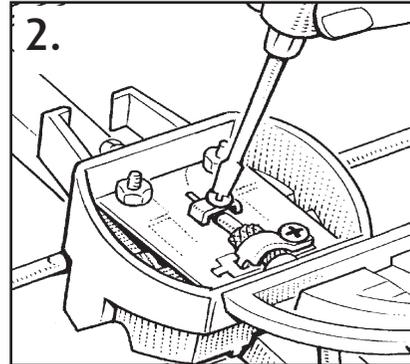


Loosen the screws on the 2 terminals in the Dipole. Feed the inner core to one of the terminals and the twisted braid into the other. Tighten screws and close Dipole Cap.

## Polarisation

Tip: Look at outdoor aerials in your area to see which direction to point your aerial for best reception.

(Note different model illustrated for example only)

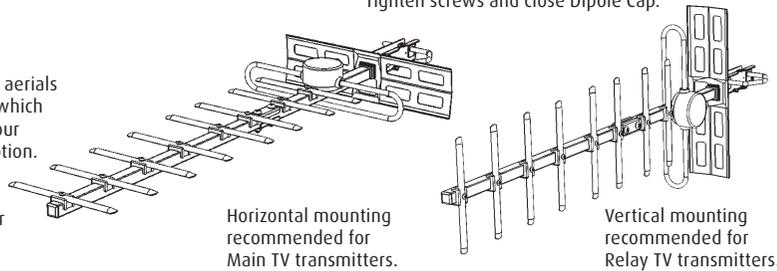

## Aligning your aerial

Turn on your TV set. Refer to manufacturers instructions to tune your TV into the available digital/HD/3D channels. Select a tuned-in channel. Next, carry out the following procedures:

1. Turn your aerial to the LEFT until you lose the picture (if alone turn the volume up and turn until you hear a reduction in sound quality).
2. Remember this position and turn your aerial to the RIGHT until you lose the picture/sound again.
3. Now point the aerial in the centre of these two points and you will receive optimum reception.

Digital & HD reception:

Reception of digital terrestrial TV (DTT) signals is subject to:

1. Use with a DTT set top box or integrated TV with digital tuner/receiver
2. Satisfactory signal quality from DTT transmitter

To receive terrestrial HD channels you will require the following:

1. An HD ready TV
2. Freeview HD receiver or TV with integrated Freeview HD tuner/receiver
3. HD signals must be transmitted in your local area. Visit [www.freeview.co.uk](http://www.freeview.co.uk) for more information.


Safety warnings:

- > Before starting installation check structure is sound and check for hidden electrical wiring or plumbing.
- > When working on installations outside, beware of overhead power lines.
- > Observe safe working practices, tread carefully and ensure adequate lighting is available in loft/roof space.
- > Always follow manufacturer's operating and safety instructions before using tools and/or equipment.
- > Ladder safety - always read and follow the manufacturer's instruction label affixed to the ladder.
- > Ensure cable is correctly routed before fixing into position, taking care not to over tighten cable clips.
- > This product may contain small parts - keep out of reach of children.
- > After installation make regular maintenance checks.
- > If in doubt consult a qualified or professional aerial installer.

# MAXVIEW

Est 1964

## Assembly instructions

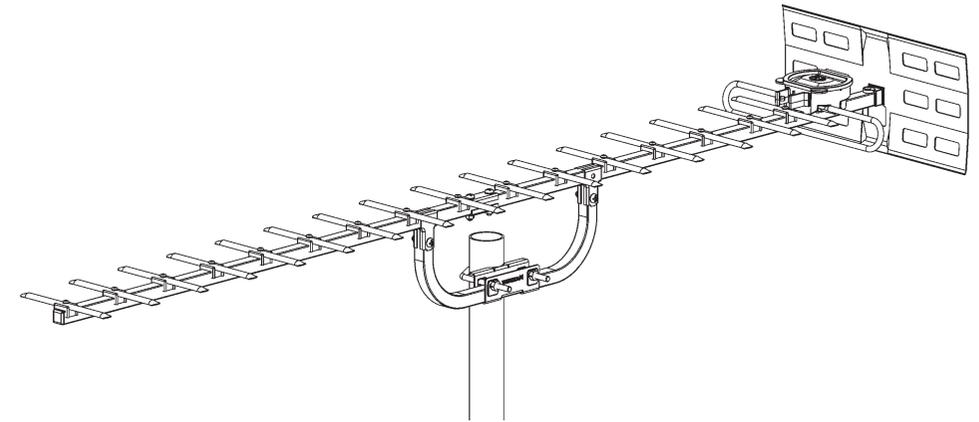

Model:


## MXR0024 TV Aerial - 18 Element

Contact:

Helpline: +44 (0)1553 811000  
Email: [support@maxview.co.uk](mailto:support@maxview.co.uk)  
Web: [www.maxview.co.uk](http://www.maxview.co.uk)

Maxview reserve the right to change specifications without prior notice  
9111307 Iss 2

## Pack contents check

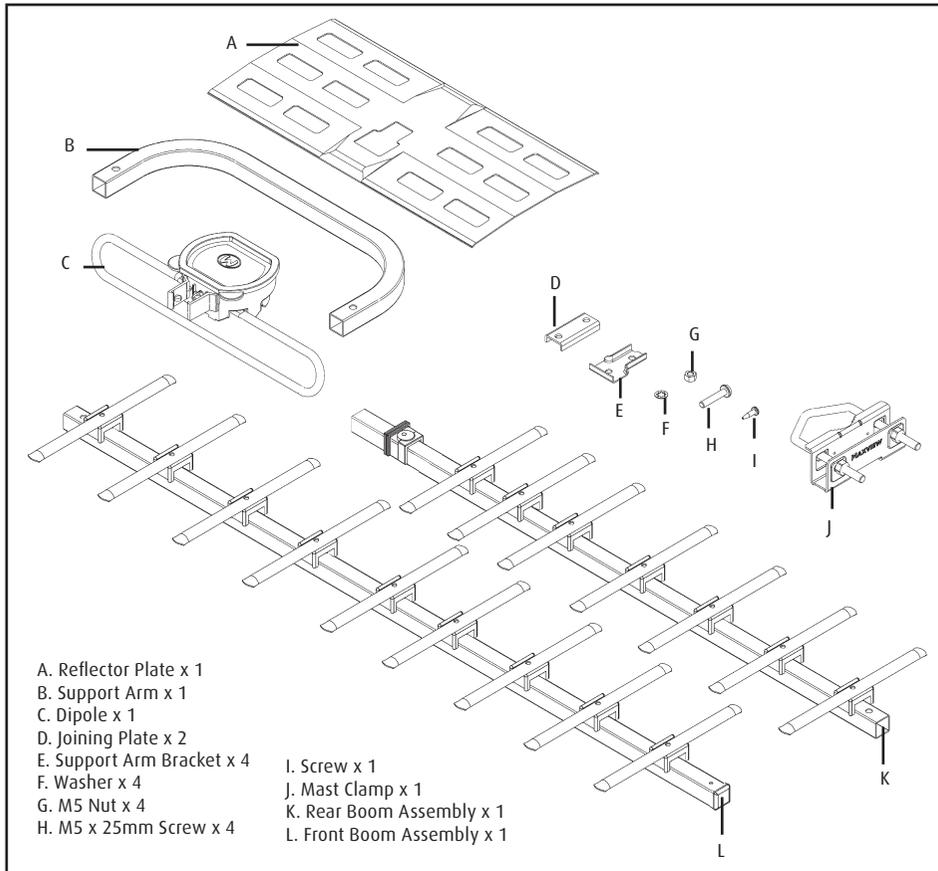

## Assembly

